

SUREFLY

ELECTRONIC IGNITION

Does your SureFly installation require a Tach2 to make the tachometer work?

- Single SIM installations with Magneto sensor – install sensor in magneto, no Tach2 necessary.
- Dual SIM installations that cannot use Tach sensor, use Tach2.
- The Tach2 is available from SureFly for customers with a tachometer installation that requires the use of the P-leads as a signal for tachometer input.
- The Tach2 will accept input from P-lead signal(s) and provide a 0-5v output that some digital tachometers require to display a tachometer indication.

